Electrolux

TECH TIP

Washer Baffle Removal

BRAND **Electrolux**

MODEL

EFLS517SIW	EFLS617STT	EFLW417SIW	ELFLS75KIW
EFLS517STT	EFLS627UIW	EFLW427UIW	ELFLS75KRR
EFLS527UIW	EFLS627UTT	EIFLS60JIW	ELFLS75KSS
EFLS527UTT	EFL628WTT	EIFLS60LSS	EWFLS70JIW
EFLS617SIW	EFLW317TIW	EIFLS60LT	EWFLS70JSS

SERIAL # **All**

CONDITION **Replacing the baffle in wash tub.**

SOLUTION To replace the Baffle the following parts will be needed:

137263600	Luxcare Lifter
131477000	Screw

Inside view of basket with baffle

Front View

Back View

Washer Baffle Removal

SOLUTION

View of the locking tabs from outside the tub.

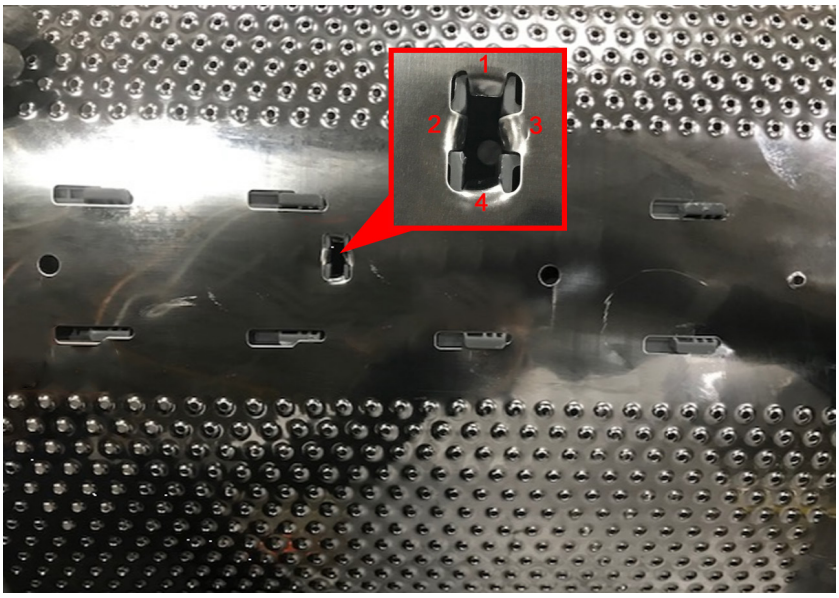

From the outside tabs could be lifted, but to remove baffle without pulling tub they will need to be pried downward.

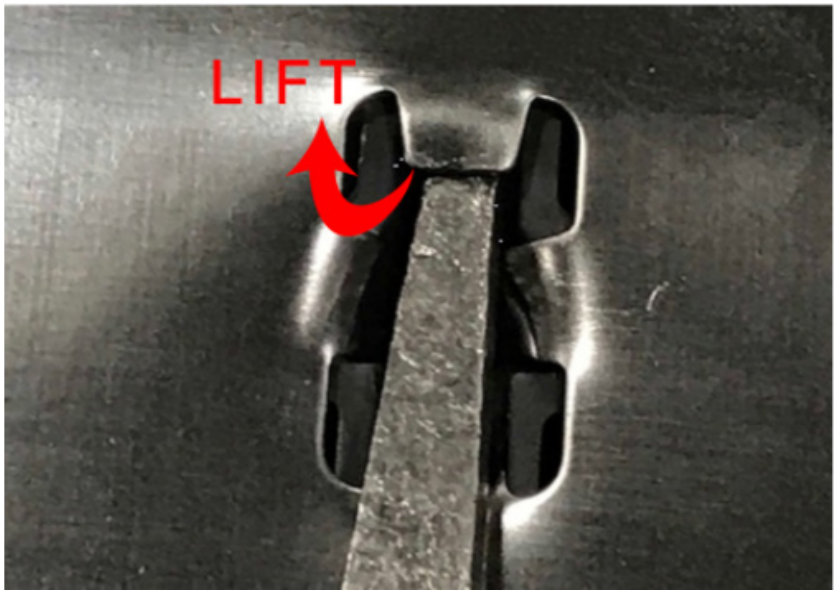

Washer Baffle Removal

SOLUTION

Inside the drum you will need a small flathead screwdriver to insert into the 4th hole going from the front to the back of the basket.

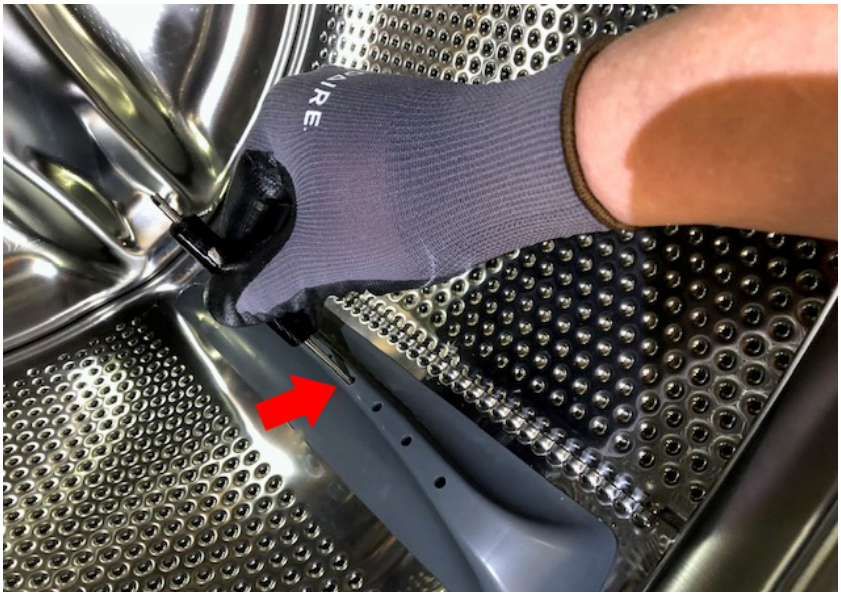

Inside of drum with the baffle removed and the tabs released.

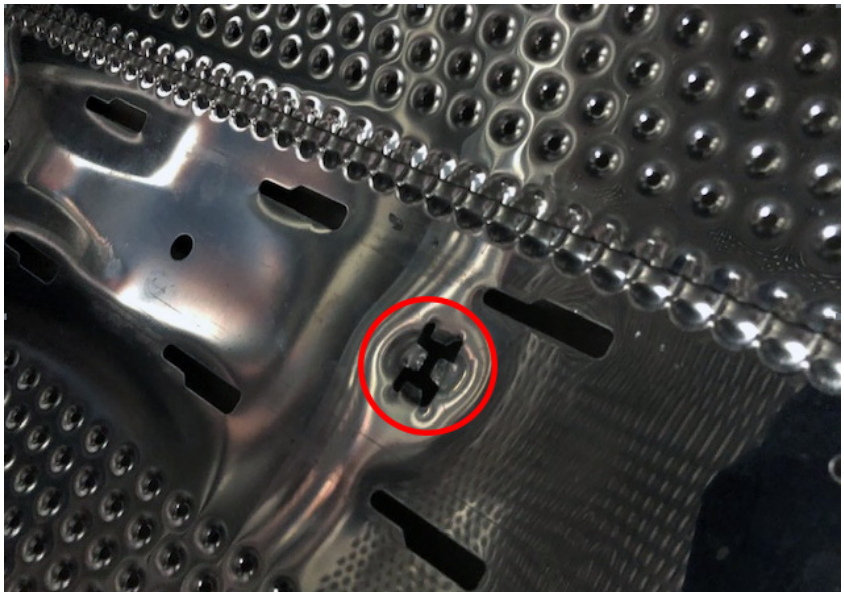

Washer Baffle Removal

SOLUTION

New baffle will secure back into the basket through hole at end of the baffle piece.